


## TEMPLATE FOR RIM PANIC EXIT DEVICE (1:1)

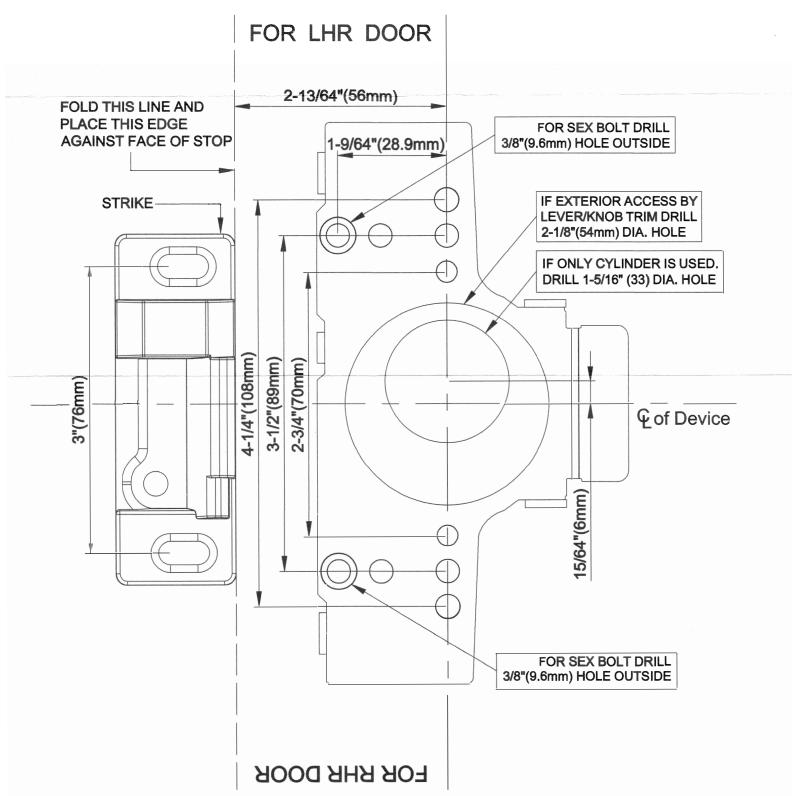

## CAUTION

CAUTION: IF EXIT DEVICE BAR NEEDS TO BE CUT, IT IS CRITICAL THE EXIT DEVICE COVER BE PROPERLY CUT. PLEASE FOLLOW THE DIRECTIONS BELOW TO AVOID POSSIBLE INJURY AFTER INSTALLATION.

- A) DEPRESS PUSH BAR UNTIL STEP "B" IS COMPLETE.
- B) WHILE THE PUSH BAR IS DEPRESSED, MOVE COVER INWARD TOWARD THE PUSH BAR UNTIL COVER EDGE TOUCHES THE PUSH BAR END.
- C) MEASURE AND MARK BAR AND COVER PIECES AS NEEDED AND SHOWN.
- D) USE MASKING TAPE TO PROTECT AND SECURE THE COVER AND BAR SECTION WHEN CUT.
- E) CUT THE COVER AND BAR TO DESIRED LENGTH.
- F) CUTTING PROCESS IS COMPLETE.

## IF CUTTING BAR IS NEEDED

